



- 0002 VALVE SPRING
- 0003 EXHAUST VALVE
- 0004 VALVE GUIDE
- 0005 O RING-VALVE GUIDE
- 0006 O RING-VALVE GUIDE
- 0007 RETAINER SCREW
- 0008 SPLIT WASHER
- 0009 TRIGGER
- 0010 SAFETY CATCH
- 0011 SAFETY BALL
- 0012 SAFETY SPRING
- 0013 FRAME SCREW-FRONT
- 0014 DOWEL PIN 1/8
- 0015 FRAME SCREW-REAR
- 0016 SEAR
- 0017 GRIP
- 0018 BOTTOM LINE
- 0019 HOSE HI-PRESSURE
- 0020 ELBOW
- 0021 GRIP RETAINING SCREW
- 0022 O RING-HAMMER
- 0023 HAMMER
- 0024 BUMPER
- 0025 SEAR SPRING
- 0026 MAIN SPRING
- 0027 SPRING GUIDE
- 0028 VELOCITY ADJ.BODY
- 0029 VELOCITY ADJ.INSERT
- 0030 O RING-VEL ADJ. INSERT
- 0032 BOLT PLUNGER
- 0034 COCKING HANDLE
- 0032 BOLT PLUNGER
- 0034 COCKING HANDLE
- 0034 COCKING HANDLE
- 0035 BALL RETAINER
- 0036 COVER PLATE-BALL RETAINER
- 0037 SPLIT WASHER-SMALL
- 0038 RETAINER SCREW-COVER PLATE
- 0040 TRIGGER SPRING
- 0043 GRIP FRAME
- 0045 LONG BOLT
- 0046 DOUBLE TRIGGER
- 0047 DOUBLE TRIGGER SHOE
- 0049 GRUB SCREW-TRIGGER SHOE
- 0052 ONE PIECE VELOCITY INSERT
- 0080 RAIN COVER
- 0099 45 GRIP FRAME SCREW
- 0100 45 GRIP ADAPTOR
- 0121 TOURNAMENT VELOCITY ADJ.INSERT
- 0122 GRUB SCREW-TOURNAMENT ADJ.
- 0155 DOUBLE TRIGGER FRAME- 45 GRIP
- 0160 45 GRIP - LEFT HAND
- 0161 45 GRIP - RIGHT HAND
- 0200 SCREW- 45 GRIP
- 0220 DUMPY BOTTOM LINE
- 0225 DUMPY BOTTOM LINE SCREW
- 0242 O-RING RAIN COVER
- 1301 FORE GRIP
- 1305 VALVE BODY
- 1310 BODY
- 1315 BARREL
- 1320 FORE GRIP SCREW
- 1330 O-RING FEED BOWL