



8

### PIRANHA PARTS LIST

PART NO.	PART NAME
P625	Tube Connector Screw Washer
P622	Tube Connector Screw
P802	Fore-End Rod
PT801-1	Ribbed Fore-End
C508	Valve Guide Retaining Nut
34-31B	Outlet Port Packing Ring-Lead
C507	Outlet Valve Seat
F506	Valve Guide O'Ring
PMI-II-X-505-3	Exhaust Valve Assembly
F503	Chamber Spring
PMI-II-512	Spring Spacer
EX601	Striker Sub-Assembly
E602	Mainspring
PTX-604B	Retaining Cap Cylinder
P626	Adaptor Assembly
CH-4	Cylinder O'Rings
CH-X	Cylinder Valve Assembly
PUR-1	7 Oz. CO <sub>2</sub> Tank
PUR-3	Butt Plate

7

### PIRANHA PARTS LIST

PART NO.	PART NAME
E803	Grip Screw
E306	Frame Mounting Screw
1-62	Relay Bearing
EX618	Sear Sub-Assembly
1-88	Trigger Relay Pin
6	Trigger Spring
E618	Sear
1-96	Bolt Friction Spring
1-97	Ball Bearing
1-54	Safety Button
1-4	Trigger Pin
E614	Trigger
E600	Frame
PUR-4	Pistol Grips

### MODEL LB ONLY

PART NO.	PART NAME
*PGX-203-2	Tube Assembly
PTX801-1 LB	Ribbed Fore-End