


# DRAGONFLY

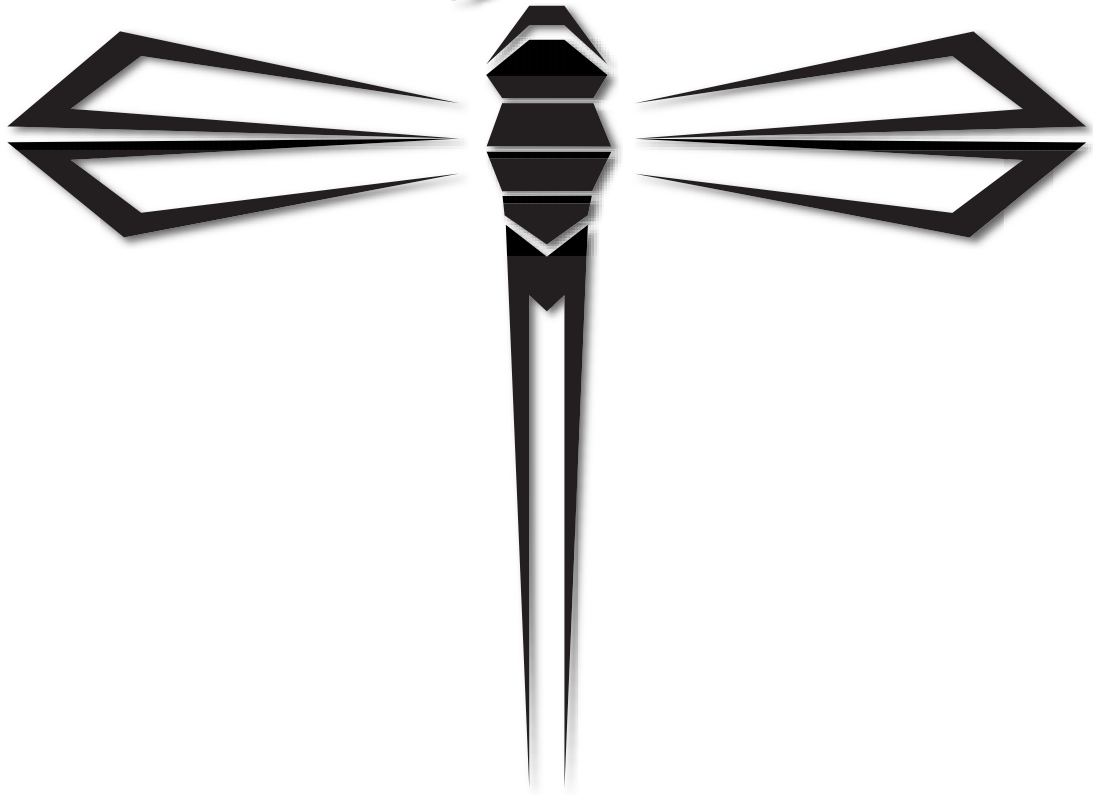

[WWW.M3PAINTBALL.COM](http://WWW.M3PAINTBALL.COM)  
TOLL FREE AT 1-866-637-2255

# Owners Manual

## Warning!

This marker is not a toy. Misuse may cause serious injury or death. Eye protection designed for paintball use must be worn by the user and any person within range. Recommend at least 18 years of age to purchase, 14 years old to use with adult supervision, 10 years old to use on paintball fields meeting ASTM-Standard F1777-97. Read operation manual before using..

## Warning!

Never shoot at anyone without the proper protective equipment for the eyes, throat, ears and head. Failure to follow these safety instructions could result in bodily injury including blindness and deafness...

## Rules for Safe Paintball Marker Handling

1. Always wear proper eye, face, ear protection designed to stop paintballs.
2. Never shoot a person who is not wearing proper protection.
3. Treat every paintball marker as if it were loaded.
4. Never point a paintball marker at anything you do not intend to shoot.
5. Keep the paintball marker on safety until ready to shoot.
6. Keep barrel plug in the marker barrel when not on the field.
7. Always remove gas source before disassembly.
8. Store the paintball marker unloaded and degassed in a locked place.
9. Follow warnings listed on the gas source for handling and storage.
10. Never use anything other than .68 caliber paintballs.
11. Do not shoot fragile objects such as windows.
12. Paintballs may cause staining of some porous surfaces such as brick, stucco, and wood..
13. Always measure your markers velocity before playing paintball.
14. Never shoot at velocities in excess of 300 feet per second.

## Operating Instructions

1. TURN ON MARKER AND PUT IT ON SAFETY.
2. ATTACH GAS SOURCE: must use high pressure air system, not CO<sub>2</sub>. not supplied with marker
3. LOAD PAINTBALLS: (not included)
4. EYE PROTECTION: must be for use with paintball markers...
5. REMOVE BARREL PLUG OR BLOCKING DEVICE
6. SET VELOCITY: below 300 feet per second
7. FIRE MARKER: be sure the marker is in working order before use.

### **SET-UP OF THE MARKER**

This marker is designed to run only on high pressure air. No co2 should be used with this marker..This is a low pressure input marker. Input pressure into the marker should be set at 160-190 psi. Marker must be used with a low pressure regulator not supplied with the marker. See your local retail store on the best regulator for your personal needs. With input pressure set the velocity should be adjusted through the rear velocity adjuster.

### **TO ADJUST VELOCITY**

- 1.SET INPUT PRESSURE(160-190PSI)
- 2.REMOVE COCKING ROD FROM THE BACK OF THE MARKER.(small rod under the bolt)
- 3.TURN VELOCITY PLUG WITH ALLEN WRENCH CLOCKWISE TO RAISE THE VELOCITY
- 4.TURN VELOCITY PLUG COUNTER CLOCKWISE TO LOWER THE VELOCITY.
- 5.REPLACE THE COCKING ROD AND CHECK THE VELOCITY.
- 6.REPEAT STEPS 3-5 UNTIL DESIRED VELOCITY IS SET.

### **BATTERY INSTALLATION**

1. REMOVE LEFT SIDE GRIP PANEL WITH #2 PHILLIPS HEAD SCREW DRIVER
2. INSTALL NEW FRESH 9 VOLT BATTERY. HEAVY DUTY ALKALINE BATTERY IS RECOMMENDED
3. REPLACE THE GRIP PANEL(DO NOT OVER TIGHTEN THE SCREWS. THIS COULD CAUSE DAMAGE)

### **TURNING ON THE GUN**

1. PRESS AND HOLD THE SWITCH ON LOWER GRIP FRAME FOR 5 SECONDS.
2. GREEN LIGHT WILL BE IN SAFE MODE
3. PUSH SWITCH AGAIN TO CHANGE MODES
4. RED LIGHT WILL BE THE FIRE OR LIVE MODE
5. ORANGE LIGHT WILL BE THE FULL AUTO MODE. (THIS MODE IS AN OPTION)

FOR ADDITIONAL INFORMATION SEND A EMAIL TO [TECHSUPPORT@M3PAINTBALL.COM](mailto:TECHSUPPORT@M3PAINTBALL.COM) OR FEEL FREE TO CALL TOLL FREE @ 1-866-637-2255