




## PRO-SHOT™ PERFORMANCE KIT FOR VM68/PMI-3/CAR68/VMX

Remove spring, guide, bolt and hammer from gun. Spring & Guide will not be used again.

**CAUTION:** Top plug is under spring tension. Remove Carefully.

1. Turn Hammer assembly upright as shown
2. Remove allen screw (a).
3. Remove white bumper (b), being careful not to remove retainer (c).
4. Set aside screw, (a) and bumper (b). They will not be used again.
5. Reassemble using allen screw and lock washer provided. A small amount of Loctite may also be applied to the threads to prevent loosening of this screw.

**CAUTION:** Under NO circumstances should safety sleeve (d) be removed for any reason. If there is any question whatsoever regarding the operation of the safety

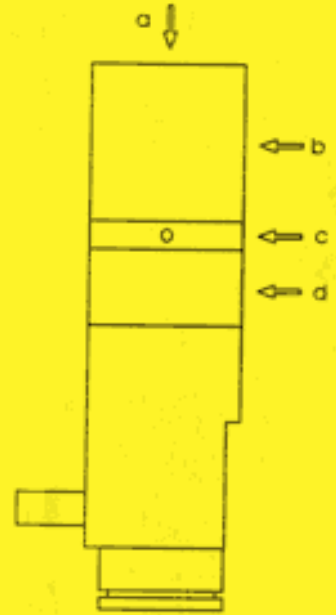

Reinstall hammer into gun. Place PRO-SHOT™ spring behind hammer. Install PRO-SHOT™ rear block assembly in place of the rear plug. Velocity can be adjusted by screwing the adjuster in or out as necessary. Screwing the adjuster back into the block will DECREASE velocity, while screwing the adjuster out will INCREASE velocity. Under no circumstances should velocity ever exceed 300 fps. If the adjuster is screwed out too far it may not allow the spring to fully compress which will prevent the gun from recocking properly.